

## LET'S GET IT TOGETHER



### Stem Assembly

- Take hold of stem and lift into upright position (1).
- Open quick release (1); Align stem with steerer tube (2) and slide it down to base of steerer tube.
- Making sure stem is parallel with front wheel, tighten quick-release\* into closed position. (refer to Quick-Release operating instruction on page 13)

**\*WARNING:** Failure to tighten properly could cause an accident resulting in serious injury.



9

### Handlebar Assembly


- While pressing down on brass locator (1), insert handle bars into stem.
- Rotate handle bar into one of the three set comfort positions.\*\*

**IMPORTANT:** Make sure brass locator snaps properly into place.

- Tighten stem quick-release into closed position\*

**\*WARNING:** Failure to tighten properly could cause an accident resulting in serious injury.

**\*\*IMPORTANT:** Adjust brake lever operating position if needed.

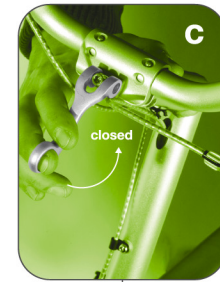

10

## LET'S GET IT TOGETHER



### Seatpost

- With Quick Release open, carefully slide seatpost into seat tube (1)
- Position seatpost to desired height. (see p.16 for setting correct seat height.)
- Tighten quick-release\* into closed position. (refer to Quick-Release Safety Check p 13)



**\*WARNING:** Failure to tighten properly could cause an accident resulting in serious injury.



11

### Seatpost Compartment

- To access seatpost compartment, unlock seat quick release and remove seatpost. Turn cap at bottom of post counter-clockwise and remove (1)
- Slide out the IXI Storage Wrap.
- Your IXI Storage Wrap comes equipped with: IXI Pump, Patch Kit, Tire Levers, & Spare Interlock Bolt.

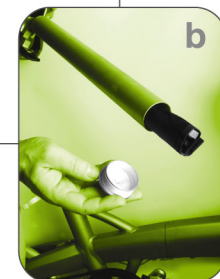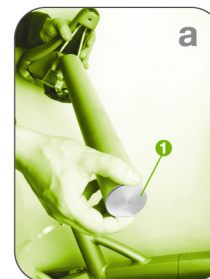

12